




[Installation Instruction]

[Part #]	271 477 A
[Vehicle]	'11 – Current Nissan Juke 2WD only (MR16DDT, 1.6L Turbo)
[Product]	Front Lower Arm Bar, Ver.2
[Detail]	Aluminum Bar with Blue Paint
[Contents]	None

Step 1: Support Front Member by using Floor/Transmission Jack first. Then remove x8 bolts (reuse) and take the OE side plates showing arrows in below picture. Please keep these two side plates in safe place for your future's use. No need to use with CUSCO product.



Step 2: Please remove x2 Rebound Stoppers from OE Member Stay and re-install these on CUSCO Lower Arm Bar. (Showing below)

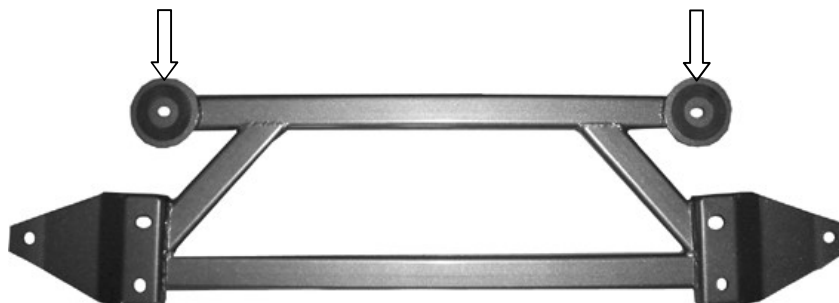

Step 3: Install CUSCO Lower Arm Bar with OE Bolts (x8 total).

